



External Micrometer with Add on Extension Anvil

How to Use :-


1. Unscrew the protective nut from the anvil.

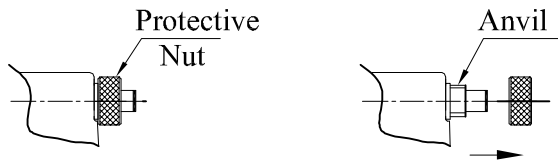

2. Clean the Measuring surfaces of the anvil and resting face of the Add on extension with a soft lint free cloth.

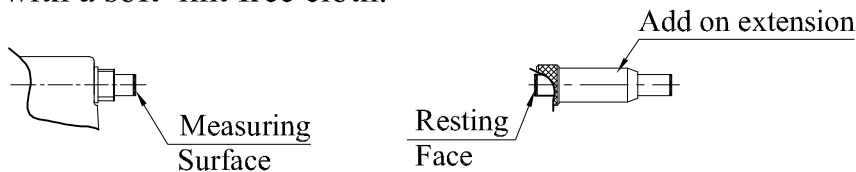


3. Screw the Add on extension on to anvil face till it is completely tightened and cannot rotate further.

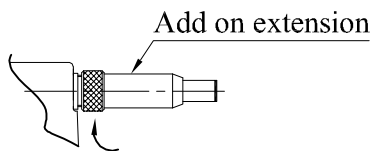


4. Setting -

Setting maximum size of the required measuring range

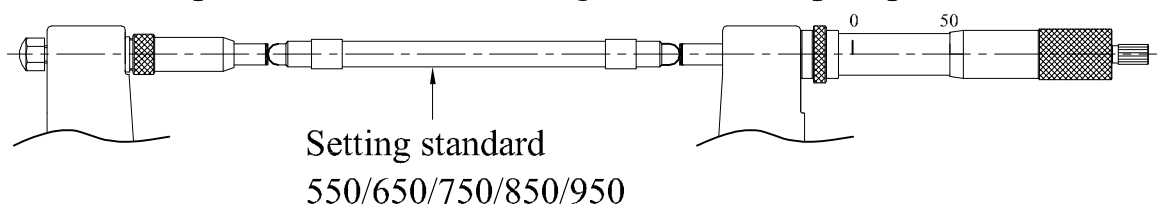

Setting minimum size of the required measuring range

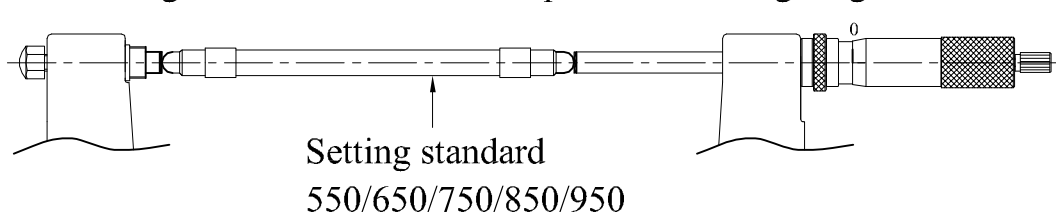

5. Zero Setting -

If the size measured by the micrometer is different from the size of the setting standard, loosen the allen screw using the allen key & adjust to the size of the setting standard by rotating the sleeve using the spanner provided.

