


SETTING INSTRUCTION FOR INTERCHANGEABLE ANVILS

Knurling nut

Anvil

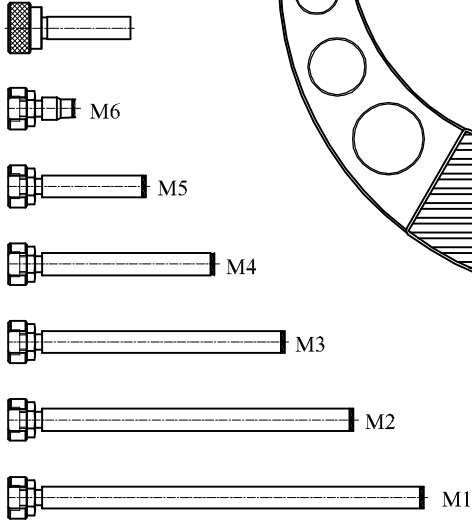


INTERCHANGEABLE ANVILS

RANGE	M1	M2	M3	M4	M5	M6
0-100	-	-	0-25	25-50	50-75	75-100
0-150	0-25	25-50	50-75	75-100	100-125	125-150
150-300	150-175	175-200	200-225	225-250	250-275	275-300
200-300	-	-	200-225	225-250	250-275	275-300
300-400	-	-	300-325	325-350	350-375	375-400
400-500	-	-	400-425	425-450	450-475	475-500

SETTING INSTRUCTION FOR INTERCHANGEABLE ANVILS

Knurling nut

Anvil

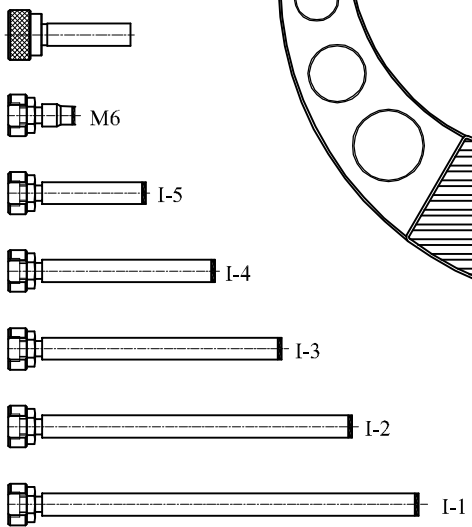

INTERCHANGEABLE ANVILS

RANGE	I-1	I-2	I-3	I-4	I-5	M6
0 - 4"	-	-	0 - 1"	1 - 2"	2 - 3"	3 - 4"
0 - 6"	0 - 1"	1 - 2"	2 - 3"	3 - 4"	4 - 5"	5 - 6"
6 - 12"	6 - 7"	7 - 8"	8 - 9"	9 - 10"	10 - 11"	11 - 12"
8 - 12"	-	-	8 - 9"	9 - 10"	10 - 11"	11 - 12"
12 - 16"	-	-	12 - 13"	13 - 14"	14 - 15"	15 - 16"
16 - 20"	-	-	16 - 17"	17 - 18"	18 - 19"	19 - 20"